

Snow Melting Control 654 - Feature Set 1

Welcome To WMS Snow Melting Control 654 Overview





www.wmssales.com/webinar-login/:



654 Feature Set 1: Sequence of Operation




- Temperature setpoints
 - Idling
 - Melting
 - Storm
 - WWSD, CWCO
- On/Off methods
- Multi-zone systems



Melt Setpoint




 Select the desired surface temperature of the slab surface during melting

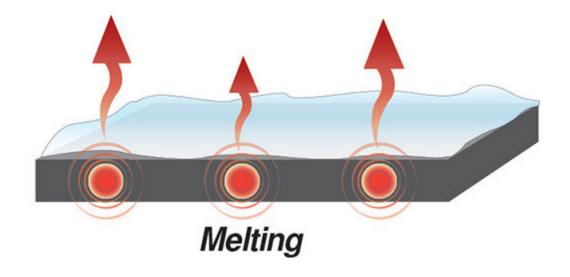



Automatic Start & Stop

Automatic start and stop operation requires the installation of a Snow / Ice Sensor 090 or 094.

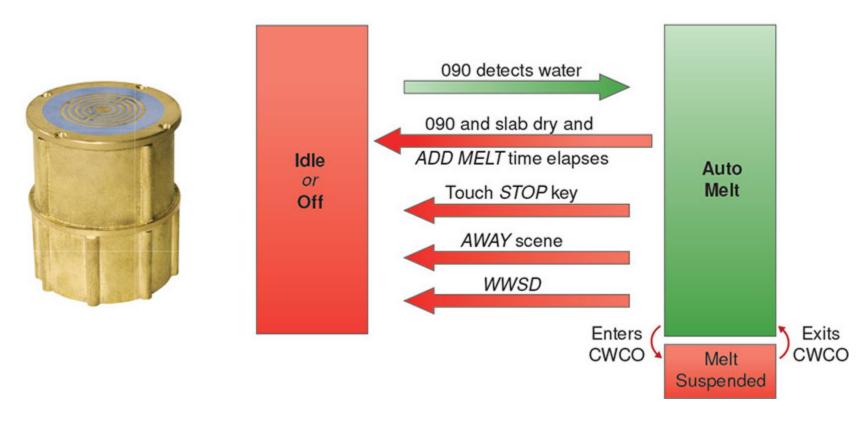



Summary

- Temperature Setpoints
 - Idle
 - Melt
 - Storm
 - WWSD, CWCO
- On/Off methods
 - Automatic Start & Stop
 - Automatic Start & Timed Stop
 - EconoMelt
 - Manual Start & Stop
 - Programmable Schedule
- Multi-zone systems

